



Existing Tools (Common with Other Models)

5. Engine

Number	Tool Number	Description	Q'ty	Remarks
①	07GAF—PH60300	Piston Pin Base Insert	1	
②	07HAD—PJ70200	Stem Seal Driver	1	
③	07HAF—PL20102	Piston Base Head	1	
④	07HAH—PJ70100	Valve Guide Reamer, 5.5 mm	1	
⑤	07JAB—0010000	Crank Pulley Holder Set	1	
⑤-1	07JAA—0010200	Socket Wrench 19 mm	(1)	
⑤-2	07JAB—0010400	Handle	(1)	
⑥	07JAB—0010400	Pulley Holder Attachment HEX 50 mm	1	
⑦	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
⑧	07JGG—0010100	Belt Tension Gauge	1	
⑨	07KAK—SJ40100	Engine Tilt Hanger Set	1	
⑩*	07LAA—PR30100	Tappet Adjusting Wrench	1	
⑪*	07LAF—PR30100	Pilot Collar	1	
⑫*	07LAJ—PR30100	Valve Inspection Set	1	
⑬*	07LAJ—PR30200	Air Stopper	1	
⑭*	07LAK—PR30100	Gauge Joint Adaptor	1	to be used with ⑩
⑮	07406—0030000	Oil Pressure Gauge Attachment	1	
⑯	07406—0070000	Low Pressure Gauge	1	to be used with ⑭
⑰	07742—0010100	Valve Guide Remover, 5.5 mm	1	
⑱	07744—0010400	Pin Driver, 5.0 mm	2	Use to set the camshaft
⑲	07744—0010600	Pin Driver, 8.0 mm	1	07944-6110200 may also be used
⑳	07746—0010400	Attachment, 52 x 55 mm	1	
㉑	07749—0010000	Driver	1	07949-6110000 may also be used
㉒	07757—PJ10200	Valve Spring Compressor Attachment	1	
㉓	07757—0010001	Valve Spring Compressor	1	07957-3290001 may also be used
㉔	07912—6110001	Oil Filter Socket	1	
㉕	07924—PD20003	Ring Gear Holder	1	07924-PD20002 may also be used
㉖	07942—8920000	Valve Guide Driver, 5.0 mm	1	
㉗	07948—SB00101	Oil Seal Driver Attachment	1	
㉘	07973—PE00310	Piston Pin Driver Shaft	1	
㉙	07973—PE00320	Piston Pin Driver Head	1	
㉚	07973—6570500	Piston Base	1	
㉛	07973—6570600	Piston Base Spring	1	
㉜	07999—PD6000A	PGM-FI Test Harness	1	

* New Tools

6. Fuel and Emissions

Number	Tool Number	Description	Q'ty	Remarks
①	07JAZ—SH20100	R.P.M. Connecting adaptor	1	
②	07406—0040001	Fuel Pressure Gauge Set	1	
②-1	07406—0040100	Pressure Gauge	(1)	┌— Component tools
②-2	07406—0040201	Hose Assy	(1)	
③	07411—0020000	Digital Circuit Tester	1	
④	07999—PD6000A	PGM-FI Test Harness	1	

Special Tools

Existing Tools (Common with Other Models)

7. Clutch

Number	Tool Number	Description	Q'ty	Remarks
①	07LAF—PR30200	Clutch Alignment Tool	1	
①-1*	07LAF—PR30210	Clutch Alignment Shaft	1	
①-2	07JAF—PM7011A	Clutch Alignment Disc	1	
①-3	07936—3710100	Handle	1	
②	07749—0010000	Driver	1	
③	07746—0010100	Attachment, 32 x 35 mm	1	
④	07924—PD20003	Ring Gear Holder	1	

*New Tool

8. Manual Transmisshon (Y2)

Number	Tool Number	Description	Q'ty	Remarks
①	07GAD—PG40100	Oil Seal Driver	1	
②	07GAJ—PG20102	Mainshaft Thrust Clearance Inspection Tool	1	
②-1	07GAJ—PG20110	Mainshaft Holder	1	
②-2	07GAJ—PG20130	Base	1	
③	07JAC—PH80000	Adjustable Bearing Remover Set	1	
③-1	07JAC—PH80100	Bearing Remover Attachment	1	
③-2	07JAC—PH80200	Remover Handle Assembly	1	
③-3	07741—0010201	Remover Weight	1	
④	07744—0010400	Pin Driver, 5.0 mm	1	
⑤	07744—0010600	Pin Driver, 8.0 mm	1	
⑥	07746—0010200	Attachment, 37 x 40 mm	1	
⑦	07746—0010400	Attachment, 52 x 55 mm	1	
⑧	07746—0030100	Driver	1	
⑨	07746—0041100	Pilot Driver, 28 x 12 mm	1	
⑩	07749—0010000	Driver	1	
⑪	07947—SD90200	Oil Seal Driver Attachment	1	
⑫	07979—PJ40001	Magnet Stand Base	1	

10. Driveshaft

Number	Tool Number	Description	Q'ty	Remarks
①	07GAF—SD40700	Hub Dis/Assembly Base	2	
②	07JAD—SH30100	Oil Seal Driver Attachment	1	
③	07JAD—PG40100	Oil Seal Driver Attachment	1	
④	07JAF—SH20400	Support Base Attachment	1	
⑤	07746—0010300	Attachment, 42 x 47 mm	1	
⑥	07746—0010400	Attachment, 52 x 55 mm	1	
⑦	07746—0030100	Driver, 40 mm I.D.	1	
⑧	07746—0040800	Pilot, 35 mm	1	
⑨	07749—0010000	Driver	1	
⑩	07965—SD90100	Support Base	1	



11. Manual Steering

Number	Tool Number	Description	Q'ty	Remarks
①	07916—SA50001	Steering Gearbox Lock Nut Wrench	1	07916-6920100 may also be used.
②	07941—6920003	Ball Joint Remover	1	
③	07974—SA50800	Ball Joint Boot Clip Guide B	1	

12. Suspension

Number	Tool Number	Description	Q'ty	Remarks
①	07GAE—SE00101	Shock Absorber Spring Compressor	1	07GAE-SE00100 may also be used.
②	07GAF—SE00200	Hub Assembly Driver Attachment	1	
③	07GAF—SE00401	Front Hub Driver Base	1	
④	07HGK—0010100	Wheel Alignment Gauge Attachment	1	
⑤	07JAF—SH20110	Hub Dis/Assembly Pilot, 38 mm	1	
⑥	07JAF—SH20120	Hub Dis/Assembly Shaft 22.4 x 25.4 mm	1	
⑦	07JAF—SH20200	Ball Joint Remover Base	1	
⑧	07746—0010400	Attachment, 52 x 55 mm	1	
⑨	07746—0010600	Attachment, 72 x 75 mm	1	
⑩	07749—0010000	Driver	1	
⑪	07941—6920003	Ball Joint Remover	1	
⑫	07947—6340000	Oil Seal Driver	1	
⑬	07965—SA70100	Hub Dis/Assembly Tool A	1	
⑭	07965—SB00100	Ball Joint Remover/Installer	1	
⑮	07965—SB00200	Ball Joint Installer Base	1	
⑯	07965—6340301	Hub Dis/Assembly Base	1	
⑰	07965—6920201	Hub Dis/Assembly Base	1	
⑱	07965—6920500	Dis/Assembly Tool E	1	
⑲	07974—SA50700	Ball Joint Boot Clip Guide A	1	
⑳	07974—SA50800	Ball Joint Boot Clip Guide B	1	

Special Tools

Existing Tools (Common with Other Models)

13. Brakes

Number	Tool Number	Description	Q'ty	Remarks
①	07HAA—SG00100	ALB T-wrench	1	
②	07HAE—SG00100	Brake Spring Compressor	1	
③	07HAJ—SG00602	ALB Checker	1	
	or			
	07508—SB00000	ALB Checker	1	
	—07HAJ—SG00400	Adaptor	1	
④	07HAK—SG00110	Pressure Gauge Joint Pipe	1	
⑤	07JAG—SD40100	Pushrod Adjustment Gauge	1	
⑥	07404—5790300	Vacuum Gauge	1	
⑦	07406—5790200	Pressure Gauge	2	
⑧	07410—5790100	Pressure Gauge Attachment C	2	
⑨	07410—5790500	Tube Joint Adaptor	1	
⑩	07510—6340101	Pressure Gauge Joint Pipe	1	
⑪	07510—6340300	Vacuum Joint Tube A	1	
	or 07510—6340400	Vacuum Joint Tube B	1	
⑫	07749—0010000	Driver	1	07949-6110000 may also be used.
⑬	07914—SA50001	Snap Ring Pliers	1	
⑭	07921—0010001	Flare Nut Wrench	1	
⑮	07947—6890300	Driver Attachment C	1	

15. Heater and Air Conditioner

Number	Tool Number	Description	Q'ty	Remarks
①	07JGG—0010100	Belt Tension Gauge	1	
②	07LAB—SK70100	A/C Clutch Holder	1	

16. Electrical

Number	Tool Number	Description	Q'ty	Remarks
①	07JGG—0010100	Belt Tension Gauge	1	
②	07920—SB20000	Fuel Sender Wrench	1	